


Perforated acoustic panels – installation guide



Acer, Circulo, WavO



What I need:

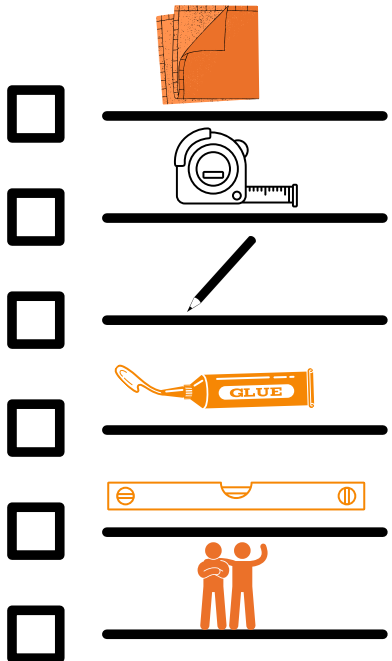

- 1** Clean the wall

Use a damp cloth to remove any dust.
- 2** Measure & mark

Determine the position of the first panel, plot a vertical and a horizontal line to serve as the start of the panel arrangement.
- 3** First panel

Lie the first panel on the flat surface with the front side facing down and apply glue as shown on the foam.
- 4** Wait for the open time

2- 10 mins.

Depending on the glue that you use, wait for the recommended open time.
- 5** Place, level, hold

Place, level and hold the panel against the wall for at least 2 minutes while the glue straightens.
- 6** Next panels

Subsequent panels are fitted with a 0.2-inch gap between each other. Follow the guide from step 3 to 5 for each panel.
- 7** Wait to dry

24 HOURS

Do not lean furniture or other heavy items on the newly glued panels for at least 24 hours.
- 8** ENJOY

After 24 hours have passed, you can clean your new panels with soft damp cloth and enjoy improved acoustic environment.